





DuraVision™ Convex Mirror Installation Guide:

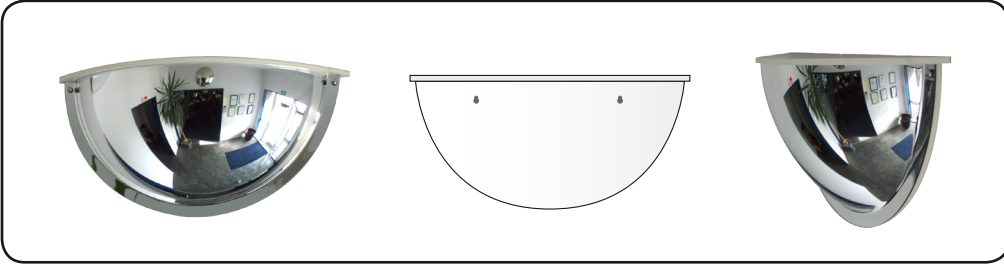

DeLuxe Half Dome


1. Measure the distance between the two hole slots on the wall
(250mm apart for 450x225mm Half Dome)
(300mm apart for 600x300mm Half Dome)
(500mm apart for 900x450mm Half Dome)
2. Screw the supplied wall screws into the wall or insert the supplied wall plugs into the wall, making sure they are level and the screws are protruding out from the wall approx 13mm.
3. Slot the mirror onto the screws to hang.
4. When the job is complete, remove the protective film from the face.



Measure distance apart for
screws on the wall



Wall Screws and
Plugs Supplied

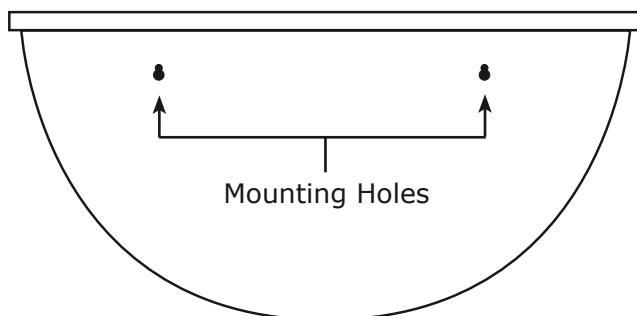

Installation Guides:

- ▶ Indoor Standard Convex Mirror
- ▶ Indoor Space Saver Convex Mirror
- ▶ Indoor Full Dome Convex Mirror
- ▶ [Indoor Half Dome Convex Mirror](#)
- ▶ Indoor Quarter Dome Convex Mirror
- ▶ Outdoor Heavy Duty Convex Mirror
- ▶ Outdoor De Luxe Convex Mirror
- ▶ Outdoor Pro Series Convex Mirror
- ▶ Inspection Convex Mirrors
- ▶ Food Processing Convex Mirrors
- ▶ School Mirror Set
- ▶ Corrections Dome With Frame
- ▶ Corrections Half Dome With Frame
- ▶ Corrections Quarter Dome With Frame

Cleaning Guides:

- ▶ Acrylic Mirror
- ▶ Stainless Steel Mirror
- ▶ Polycarbonate Mirror

DuraVision™ Mirror Systems

Find our more about
the great range of
DuraVision Mirror
Systems at our
website...



www.duravision.net