


## DuraVision™ Convex Mirror Installation Guide:




### Indoor Full Dome

1. Decide the appropriate place to site the mirror to give maximum vision.
2. Dome capped screws are supplied for mounting directly to the ceiling.

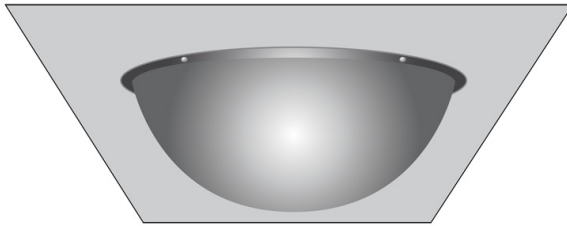

In the case of a high ceiling, a suspension kit is supplied to suspend to the ultimate height.

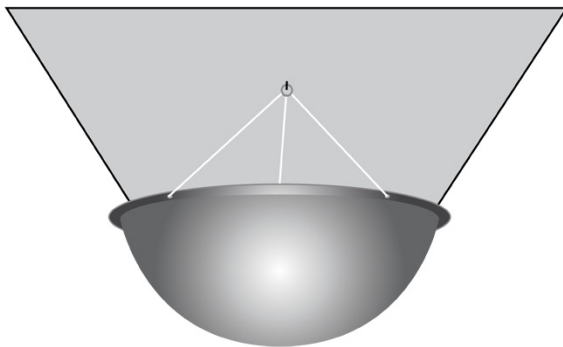

3. When installation is complete, totally remove the protective film from the face.

As an indication, the ultimate height from the floor to the bottom of the dome is:

<b>Size Model</b>	<b>Height</b>	<b>Viewing Area</b>
600mm	2.5m	20 - 30m <sup>2</sup>
900mm	2.8m	30 - 40m <sup>2</sup>
1200mm	3.5m	45 - 55m <sup>2</sup>

### Installation Guides:

- ▶ Indoor Standard Convex Mirror
- ▶ Indoor Space Saver Convex Mirror
- ▶ [Indoor Full Dome Convex Mirror](#)
- ▶ Indoor Half Dome Convex Mirror
- ▶ Indoor Quarter Dome Convex Mirror
- ▶ Outdoor Heavy Duty Convex Mirror
- ▶ Outdoor De Luxe Convex Mirror
- ▶ Outdoor Pro Series Convex Mirror
- ▶ Inspection Convex Mirrors
- ▶ Food Processing Convex Mirrors
- ▶ School Mirror Set
- ▶ Corrections Dome With Frame
- ▶ Corrections Half Dome With Frame
- ▶ Corrections Quarter Dome With Frame

### Cleaning Guides:

- ▶ Acrylic Mirror
- ▶ Stainless Steel Mirror
- ▶ Polycarbonate Mirror

### DuraVision™ Mirror Systems

Find our more about the great range of DuraVision Mirror Systems at our website...



[www.duravision.net](http://www.duravision.net)